


Dimensions: 120 x 80mm  
105 銅版紙 / double side printing / CMYK

**Thank you for purchasing the PerroPal Dog Trainer!**


Thank you for purchasing the PerroPal Trainer! This product uses ultrasonic sounds to train your dog or to restrain other dogs. The ergonomic design is simple to use and easy to carry. The effective range for the trainer is about 20 meters / 65 feet.




01


**CE**

The device complies with the European Directives 2014/30/EU.

 At the end of its service life, this product may not be disposed of in the normal household waste, but rather must be disposed of at a collection point for recycling electrical and electronic devices. The materials are recyclable according to their labeling. You make an important contribution to protecting our environment by reusing, recycling, or utilizing old devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located. Subject to change.

05

**PERROPAL** 




*Dog Trainer*  
**Instruction Manual**

FRONT SIDE

**What's included**

- Perropal Dog Trainer (battery not included)
- Lanyard Strap \*installed
- Instruction Manual

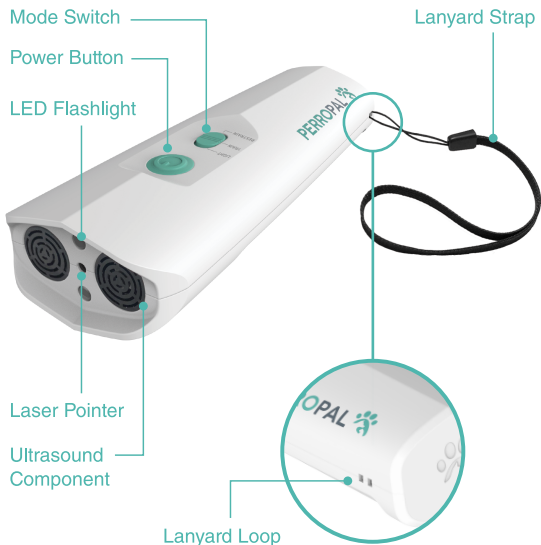

02

**Geting Started**

The trainer device is power by a 9V battery which is not included. Remove the battery cap located on the underside of the device and insert a new 9V battery. Close the battery cap and you are good to go.

Controls: There are 3 modes which can be selected by moving the slider switch. When the desired mode is selected, press the power button to activate.

1. **Light/Laser Pointer** – When the slide switch is on 'Light' the bright LED light acts as a flashlight, when you press the power button the red laser pointer will be on along with the dim flashlight. To turn off the flashlight, simply move the slide switch to either 'Train' or 'Restrained'.

2. **Train** – When the slide switch is on 'Train' press the power button to pulse the 26kHz ultrasound to alert your dog and get their attention. A dimmer LED light be on at the same time when pressed. This mode is used when your dog is not listening to you. Be sure to give it treats or praise when they follow orders.

NOTE: Every time the power button is pressed the sound will only emit for 1 second even if long pressed. You must press again to emit the sound.


03

3. **Restrained** – When the slide switch is on 'Restrained' press the power button to turn on the intense 25 kHz ultrasound along with bright flashing LED. When you encounter an aggressive dog or want to stop them from barking, this mode emits a strong frequency to suppress or chase them away. Be sure not to use this mode extensively, at most a few seconds at a time.

**Warning**

- Do not point flashing lights and laser pointer at people's eyes.
- Never look directly into the laser beam.
- Never shine a laser pointer at anyone.
- Do not aim the laser at reflective surfaces/mirror like surfaces. A reflected beam can act like a direct beam on the eye.
- Never view a laser pointer using an optical instrument, such as binocular or a microscope.
- Do not allow children to use laser pointers.

04



BACK SIDE